


FLIR[®] QUICK INSTALLATION CARD

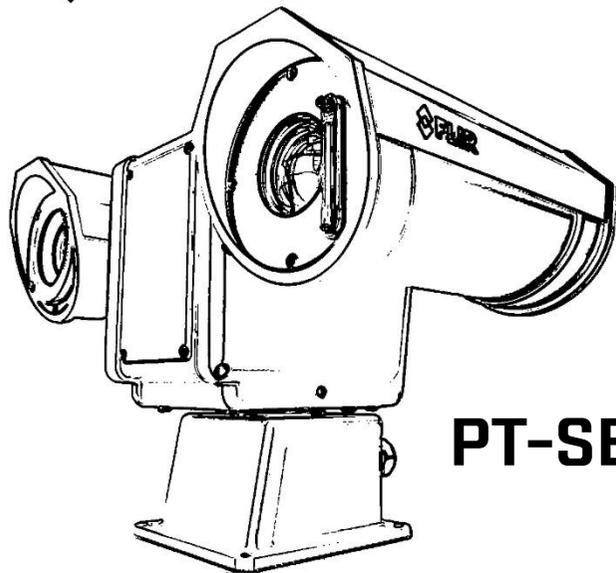

PT-SERIES AI SR

Check Contents

The PT-Series AI camera ships with these standard components:

- **Multi-sensor pan/tilt camera unit.**
- **Galvanic isolation kit.**
- **Cable glands and spare parts kit.**
- **Printed Quick Installation Card.**

If any of these items are missing or damaged, contact your authorized dealer or Teledyne FLIR Support.

Product
registration




Product support
page to download
the latest
firmware, manual,
etc.




Location Requirements

Since this device features **fully rotating pan and tilt capabilities**, please ensure that **adequate space is maintained around the camera to permit unobstructed movement**. Avoid placing objects or cables nearby that might hinder its operation, as such obstructions could result in damage or place undue strain on the pan and tilt mechanisms.

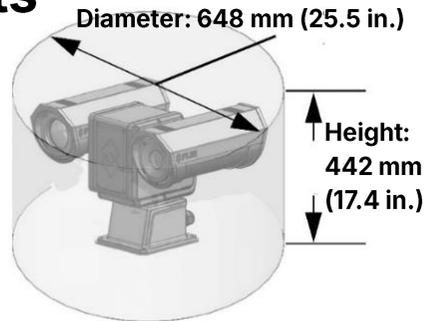

Power Requirements

The camera **does not feature an on/off switch**. Power is typically controlled via a circuit breaker. **When powered, the camera will operate** in either Booting Up or Powered On mode. The device receives power through its designated **Power connector**, accessible by removing the screws and opening the **base of the pedestal**. It requires an input voltage of **24 VAC/VDC (US model) or 24 VDC (non-US model)**, with a maximum consumption of **195 W** when heaters are active. For safety and proper operation, a **grounding strap** must be securely attached to the grounding lug on the camera housing's back plate and connected to the nearest earth-grounding point.

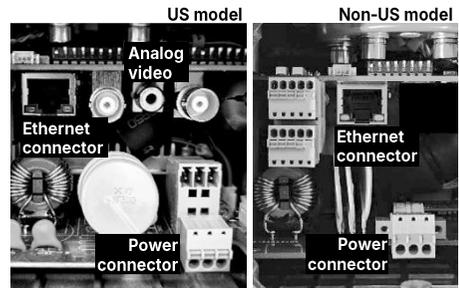

Logging In to the Camera

After connecting the camera to the network using the **Ethernet connector** in the back box, log in using a **web browser** connected to the same network as the camera. **If the network does not have a DHCP server, the PT-Series AI camera will default to 192.168.0.250**. When logging in to the camera for the first time or after resetting the camera to its factory defaults, use the camera's **default credentials (admin/admin)**.

THIS QUICK INSTALLATION CARD IS INTENDED FOR PROFESSIONAL INTEGRATORS WITH PROPER TRAINING AND EXPERIENCE.

IF THIS IS YOUR FIRST TIME INSTALLING THIS CAMERA, PLEASE READ THE FULL INSTALLATION AND USE MANUAL.